



PUSH & GEARED TROLLEY
[DC.0.032 & DC.0.033 series]



DC.0.032




DC.0.033



NOTE:

All of the information reported herein is based on data available at the moment of printing. We reserve the right to modify our own products at any moment without notice. Please read the operating instructions carefully before using this product. Always keep a copy of this instruction manual at hand. Failure to read and comply with the contents of this manual can result in serious body injury or death, and property damage.
















THIS IS THE SAFETY ALERT SYMBOL. WHEN YOU SEE THIS SYMBOL ON YOUR  PRODUCTS OR IN THIS MANUAL, BE ALERT FOR DANGEROUS SITUATIONS. FOLLOW RECOMMENDED AND SAFE OPERATING INSTRUCTIONS AT ALL TIMES.

If any doubt remains, please contact your supplier.


PRECAUTION – SAFETY WARNINGS

The user of the **DELTA SPARKLESS®** push and geared trolleys must always check if guidelines are followed, which you can find in this manual. Also he/she needs to understand the manual and user instructions completely for safety purposes. Please note that if not followed or understood correctly, potential risks are even greater and can lead to severe injuries or equipment damage. Therefore it is always recommended to save this manual correctly, accessible for the any person who is going to use it.


	Never use or install DELTA SPARKLESS® push and geared trolleys before ready and understanding the user manual.
	DELTA SPARKLESS® push and geared trolleys may only be used by qualified personnel of age. Make sure that people who are using this for the first time are familiar with the correct operation instructions and have knowledge about the safety requirements. The user must have a good mental and physical condition.
	Installation of DELTA SPARKLESS® push and geared trolleys may only be performed by professional and qualified persons who completely understand the user manual.
	Never remove the nameplate, operating and warning labels. Do not use this product without.
	Do not exceed the rated capacity, which you can find on the nameplate. If not, do not use.
	Always make sure that the supporting structures and additional lifting equipment are rated equally or higher to support the rated capacity of DELTA SPARKLESS® push and geared trolleys.
	Before installing, make sure that DELTA SPARKLESS® push and geared trolleys are visibly in good condition. After installing periodically inspect, to make sure that this is kept. If not, please contact your supplier or another professional.
	The ambient temperature of DELTA SPARKLESS® push and geared trolleys hoist and load must be between -10 °C / + 60 degrees °C
	A technical study by a professional must be carried out before instalment to prevent any risks.
	Never use the DELTA® DELTA SPARKLESS® push and geared trolleys, supporting or transporting people.
	Never lift loads over or in close proximity of people.
	People may never walk under the suspended load or stand in close proximity when DELTA SPARKLESS® push and geared trolleys is used with lifting equipment. (Danger zone) Never let people stand near the load. Make it clear. Never lift load unattended.
	Maintenance and repairs must be done by professionals and qualified companies. Always use DELTA® spare parts. Always make sure to keep a journal.
	DELTA SPARKLESS® push and geared trolleys must be regularly examined. depended on use at least once a year tested by a professional, if you have any questions, please contact your supplier.


If you have any questions , please contact your supplier.

CONTENTS




1.	Introduction	Page 4
2.	Safety instructions	Page 5
3.	PRE-check	Page 7
4.	Installation & operating instructions	Page 8
4.1	Installation	Page 8
4.2	Operation	Page 10
5.	Technical information	Page 11
5.1	Push trolley	Page 11
5.2	Geared trolley	Page 12
6.	Spare parts	Page 13
6.1	Spare parts push trolley	Page 13
6.2	Spare parts geared trolley	Page 15
7	Maintenance	Page 17
7.1	Maintenance push trolley	Page 17
7.2	Maintenance geared trolley	Page 18
8.	Trouble shooting	Page 20
9.	Derived certificate of test & Declaration of  conformity	Page 21

1. Introduction

 **DELTA SPARKLESS**® push and geared trolleys are designed for beams in a safe working environment. The user is responsible for correct operation and must always make sure that the load weight doesn't exceed the rated capacity.


 **DELTA SPARKLESS**® push and geared trolleys are in compliance with the safety factor and further safety requirements in conformity with the European Communities Machinery Directives 2006/42/EC.

 








Illustrations are for the general understanding and may differ from the actual versions

 **DELTA** reserve the right to change materials or design, if, in our opinion, such changes will improve our product. For the correct use of the  **DELTA SPARKLESS**® push and geared trolleys, operation and maintenance instructions must be followed. Abuse, repair by an unauthorized person, or use of non  **DELTA** replacement parts voids the guarantee and could lead to dangerous operation.


Please read the instructions carefully before using this product. If any doubt remains, please contact your supplier.

2. Safety instructions

	Improper operation of a DELTA SPARKLESS® push and geared trolleys can create a potentially dangerous situation which, if not avoided, could result in minor or moderate injury. Please read the safety instructions carefully.
CAUTION	DELTA SPARKLESS® push and geared trolleys may only be used by qualified personnel of age. Make sure that people who are using this product are familiar with correct operation and know all the safety requirements. The user should be in a good mental and physical condition.
CAUTION	Any person using DELTA SPARKLESS® push and geared trolleys for the first time must check (under risk-free conditions) that he/she has perfectly understood all the safety requirements and methods for safe and efficient use.
CAUTION	For professional purposes, DELTA SPARKLESS® push and geared trolleys must be placed under the responsibility of a person who is familiar with the regulations applicable at the intervention location, and having the authority to enforce application of the regulations when the person in charge is not the operator.
CAUTION	The operator must wear and use the necessary personal protective gear when using the push & geared trolley.
CAUTION	Ensure that you are in compliance with all safety at working regulations governing installation, maintenance and use of the equipment.
CAUTION	DELTA SPARKLESS® push and geared trolleys must only be installed under condition which ensure the safety of the installer in compliance with the regulations applicable to its category.
CAUTION	Make sure that DELTA SPARKLESS® push and geared trolleys is installed on a beam which has the necessary strength to support the maximum working load (W.L.L), which is indicated on the nameplate/label of the DELTA SPARKLESS® push and geared trolleys.
CAUTION	Only use DELTA hoist equipment which has a rated capacity equal or less than the capacity of the DELTA SPARKLESS® push and geared trolleys. We advise to always use a DELTA hoist equipment corresponding to the capacity of the beam and DELTA SPARKLESS® push and geared trolleys. Always make sure that the DELTA hoist equipment and load chain is in good condition, so they don't have any signs of wear cracks, corrosion or any other kind of damage.
CAUTION	DELTA SPARKLESS® push and geared trolleys must have a nameplate indicating the W.L.L. If not, please put the DELTA SPARKLESS® push and geared trolleys out of service and contact your supplier.
CAUTION	DELTA SPARKLESS® push and geared trolleys is designed for manual operation and may never be motorized.
CAUTION	Prior to use, ensure that inspection and maintenance has been carried out. Make sure that the push & geared trolley is in visible good condition. If not, contact your supplier.
CAUTION	The operator is not allowed to use the DELTA SPARKLESS® push and geared trolleys, when exceeding the rated capacity This is strictly forbidden, so always calculate the weight which is being applied.
CAUTION	During operation the user must check and observe the DELTA SPARKLESS® push and geared trolleys, beam and surroundings continuously to avoid any contact with obstacles.
CAUTION	Do not use the DELTA SPARKLESS® push & geared trolley to transport or lift people.
CAUTION	The user should never be distracted by its surrounding and be concentrated during operation process. Never lift/run load over people or let it make contact with obstacles.
CAUTION	It is strictly forbidden to allow people below or in the danger distance when being used. Do not walk under suspended load and lift load over people.


CAUTION	The operator may never leave the  DELTA SPARKLESS® push and geared trolleys unattended during use, with suspended load.
CAUTION	Do not modify  DELTA SPARKLESS® push and geared trolleys. Any disassembly or change is the sole responsibility of the user/owner.
CAUTION	 DELTA SPARKLESS® push and geared trolleys can be operated in ambient temperatures between - 10°C and 60°C. Brake systems should be checked for freezing at ambient temperatures below 0°C.
CAUTION	 DELTA SPARKLESS® push and geared trolleys is not suitable for use underwater, in humid environments or danger zone areas.
CAUTION	When  DELTA SPARKLESS® push and geared trolleys are not used, it must be properly stored in a dry and clean location. Inaccessible to persons who are not authorized to use it. This mean it cannot be laying around causing potential dangerous situations.
CAUTION	If any defects are found, stop using  DELTA SPARKLESS® push and geared trolleys immediately. Please contact your supplier.
CAUTION	Only use  DELTA® spare parts. Any repair without contacting a qualified person is the sole
CAUTION	Only use  DELTA® spare parts. Any repair without contacting a qualified person is the sole responsibility of the owner/user. In the event of definitive removal of the  DELTA SPARKLESS® push and geared trolleys, all environmental protections regulations applicable in the country of use must be observed.
CAUTION	Registration and documentation of inspections and maintenance services is the responsibility of the owner/user. This should be stored and available at all time .

3. PRE-check

 





 







	<p>Improper operation of a DELTA SPARKLESS® push and geared trolleys can create a potentially dangerous situation which, if not avoided, could result in minor or moderate injury. Please read the safety instructions carefully.</p>
<p>WARNING</p>	<p>Check DELTA SPARKLESS® push and geared trolleys for wear, cracks or any other kind of damage. If detected, please put trolley out of use and contact your supplier.</p>
<p>CAUTION</p>	<p>Never use a DELTA SPARKLESS® push and geared trolleys, which is damaged.</p>
<p>CAUTION</p>	<p>Make sure that all parts are in place.</p>
<p>CAUTION</p>	<p>Do not make any modifications on DELTA SPARKLESS® push and geared trolleys.</p>
<p>CAUTION</p>	<p>Make sure that the beam has the correct capacity and width.</p>
<p>CAUTION</p>	<p>Only use DELTA hoist equipment which has equal or less capacity than the DELTA SPARKLESS® push and geared trolleys.</p>
<p>CAUTION</p>	<p>Always calculate load weight before lifting..</p>
<p>CAUTION</p>	<p>Always inform everyone when DELTA SPARKLESS® push and geared trolleys when working activities begin or stop.</p>
<p>CAUTION</p>	<p>During use, it is strictly forbidden to be in the danger zone. Do not stand, walk under suspended load. Also do no lift load over people. Always keep a safe distance.</p>
<p>If you have any questions, please contact your supplier.</p>	

4. Installation & operating instructions

4.1 Installation


	<p>Improper installation or operation of a DELTA SPARKLESS® push and geared trolleys and additional lifting equipment can create a potentially dangerous situation which, if not avoided, could result in minor or moderate injury. Please read the safety instructions carefully.</p>
<p>WARNING</p>	<p>Before installation, check the beam and DELTA SPARKLESS® push and geared trolleys on wear, cracks or any other kind of damage. Never use trolley, which is damaged.</p>
<p>CAUTION</p>	<p>Make sure that the beam has sufficient capacity to hold the trolley at its rated capacity. Make sure that the beam is properly marked, so it is recognizable for the user. Always use trolley that is equal to the beam strength.</p>
<p>CAUTION</p>	<p>Ensure that stops are securely installed at both end of the beam prior to installation of DELTA SPARKLESS® push and geared trolleys. If not installed, do not use DELTA SPARKLESS® push and geared trolleys.</p>
<p>CAUTION</p>	<p>Only use DELTA hoist equipment which has a rated capacity equal or less than the capacity of the trolley. We advise to always use a DELTA hoist equipment corresponding to the capacity of the beam and DELTA SPARKLESS® push and geared trolleys. Always make sure that the DELTA hoist equipment and load chain is in good condition, so they don't have any signs of wear cracks, corrosion or any other kind of damage.</p>
<p>CAUTION</p>	<p>Measure the actual width of the beam.</p>
<p>CAUTION</p>	<p>Put the lifting ring in the middle of the axle in a straight line with the runway beam. Assemble the washers equally around the lifting ring to the desired beam width, at least one washer on both sides. The installer must ensure that the side clearance between the wheel flange and beam is about 3~5 mm.</p>
<p>CAUTION</p>	<p>Assemble the remaining washers outside the DELTA SPARKLESS® push and geared trolleys side plate. There must always be at least one washer on the side and the outside of each DELTA SPARKLESS® push and geared trolleys side plate.</p>
<p>CAUTION</p>	<p>After installation, screw the nuts firmly against the washers, then suspend a light load to the trolley to ensure that all four wheels are making contact with the runway beam. If so, use a wrench to tighten the hexagonal nut firmly against the washers, so it cannot go loose.</p>
<p>CAUTION</p>	<p>For DELTA SPARKLESS® push and geared trolleys, when assembled at the minimum beam width, the washer will be put on the other side of hand wheel to avoid jamming of the hand chain.</p>
<p>CAUTION</p>	<p>Suspend the maximum safe working load on the DELTA SPARKLESS® push and geared trolleys then run the unit slowly along the full length of the Runway to ensure satisfactory and safe operation.</p>
<p>CAUTION</p>	<p>The installation of DELTA SPARKLESS® push and geared trolleys may only be carried out by competent and professional person, whom understand the instructions as mentioned. If you have any questions, please contact your supplier</p>

4.2 Operation

CAUTION	After the correct installation the  DELTA SPARKLESS® push and geared trolleys, it can be used.  DELTA SPARKLESS® push and geared trolleys are operated by pulling the hand chain clockwise..
CAUTION	Only operate a  DELTA SPARKLESS® push and geared trolleys when the load is centred directly below. Do not apply any side pull.
CAUTION	Make sure that all people are away from the danger zone. It is strictly forbidden to lift load over people. The user must make sure that people always keep a safe distance.
CAUTION	Only use  DELTA hoist equipment which has a rated capacity equal or less than the capacity of the trolley. We advise to always use a  DELTA hoist equipment corresponding to the capacity of the beam and  DELTA SPARKLESS® push and geared trolleys. Always make sure that the  DELTA hoist equipment and load chain is in good condition, so they don't have any signs of wear cracks, corrosion or any other kind of damage.
CAUTION	It is strictly forbidden to walk or stand under suspended load.
CAUTION	Avoid collision or bumping  DELTA SPARKLESS® push and geared trolleys to any obstacle during use.
CAUTION	Never splice a hand chain by inserting a bolt between links.
CAUTION	Do not swing a suspended load.
CAUTION	Do not make any modifications to the  DELTA SPARKLESS® push and geared trolleys. This is strictly forbidden and will create dangerous situation when not followed.
	Improper operation of a  DELTA SPARKLESS® push and geared trolleys can create a potentially dangerous situation which, if not avoided, could result in minor or moderate injury. Please read the safety instructions carefully.
	Emergency procedure: In the event of a blocked chain or any other malfunction of  DELTA SPARKLESS® push and geared trolleys or  DELTA chain hoist. Immediately stop the maneuverer without attempting any further actions. Immediately set up a safety perimeter around the hoist and directly under the load to prevent access by any unauthorized persons. Call in the necessary personnel to remove the load and intervene on the hoist.


5. Technical information

5.1 Push trolley

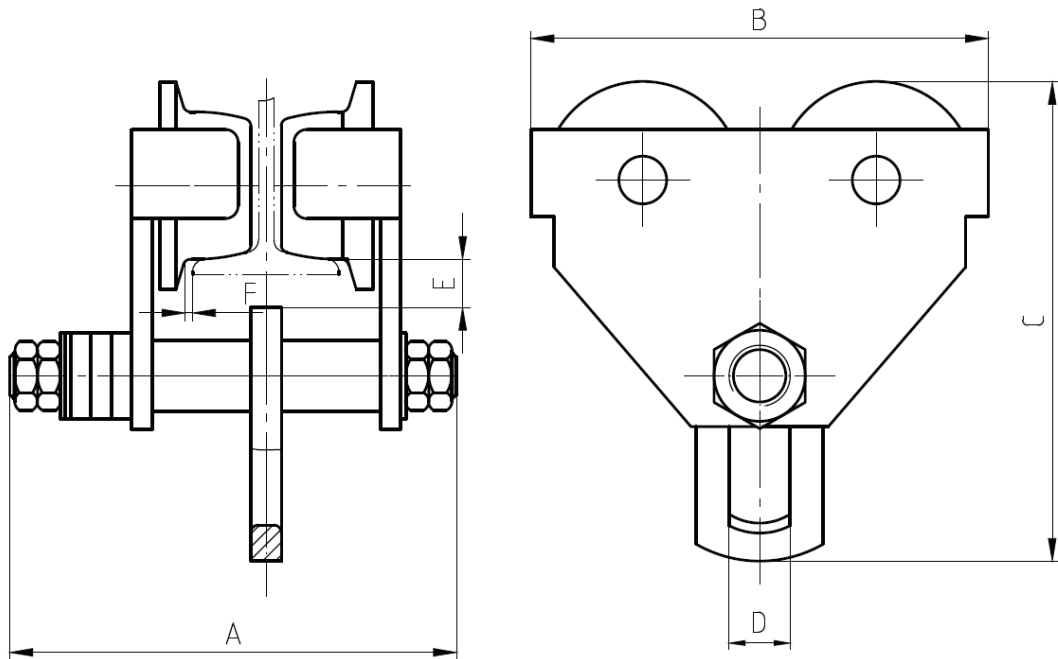

Capacity (t)		0.5	1	2	3	5	10	20
Test load (t)		0.625	1.25	2.5	3.75	6.25	12.5	25
Beam width (mm)		64-140	64-140	76-165	76-300	88-300	125-300	136-300
Dimensions (mm)	A	230	254	294	344	360	403	447
	B	212	255	302	344	378	455	642
	C	198.5	231.5	278	338	393	490	622
	D	24	30.5	36	45	60	82	110
	E	28	25	27	32	34	36.5	54
	F	≈ 3	≈ 3	≈ 3	≈ 3	≈ 5	≈ 5	≈ 5
Min. Radius (m)		0.6	0.8	1.1	1.4	1	1.3	4.7
Nett. Weight (kg)		7	12	20.5	33	51	86.5	220


5.2 Geared trolley

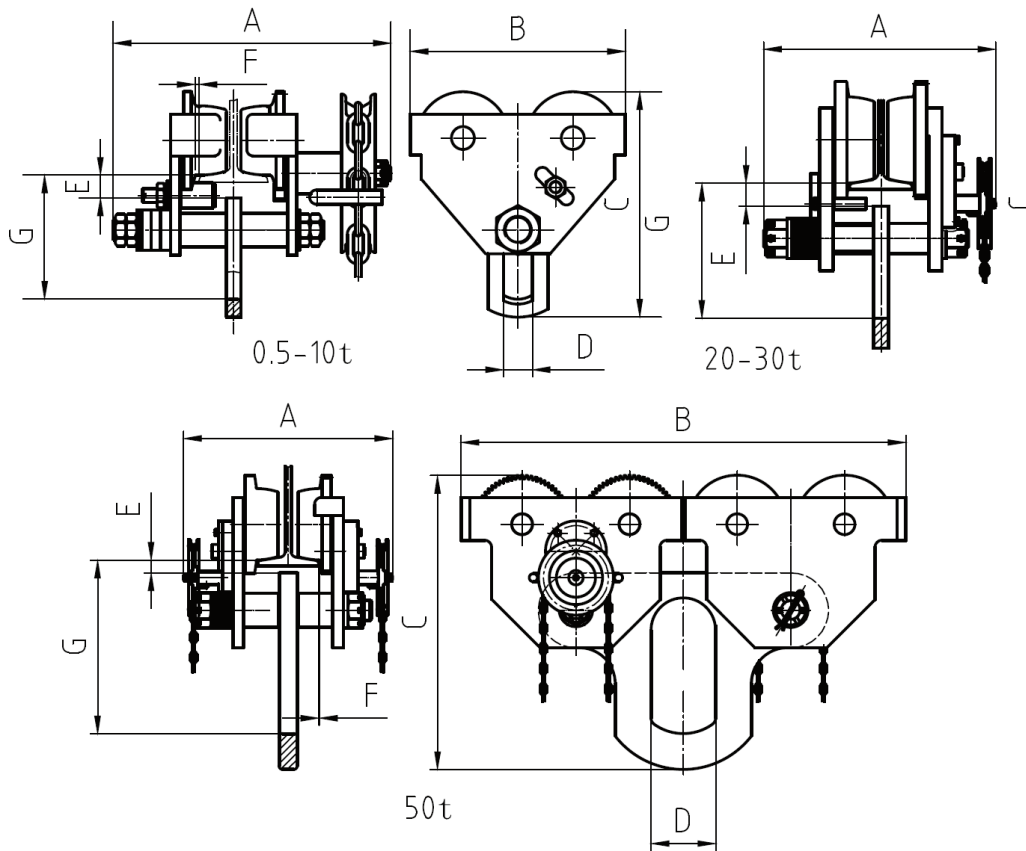

Capacity (t)	0.5	1	2	3	5	10	20	30	50
Standard operating height (m)	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5
Test load (t)	0.625	1.25	2.5	3.75	6.25	12.5	25	37.5	62.5
Beam width (mm)	64-140	64-140	76-165	76-300	88-300	125-300	136-300	250-300	170-220
Dimensions (mm)	A	308.5	328.5	361.5	428.5	434	487.5	523	570
	B	212	255	302	344	378	455	642	1242
	C	198.5	231.5	278	338	393	490	622	832
	D	24	30.5	36	45	60	82	110	180
	E	28	25	27	32	34	36.5	54	50
	F	≈ 3	≈ 3	≈ 3	≈ 3	≈ 5	≈ 5	≈ 5	≈ 5
	G	113	128	152	186	224	276.5	319	315
Min. Radius (m)	0.6	0.8	1.1	1.4	1	1.3	4.7	4.7	-
Nett. Weight (kg)	11.6	17	25.5	39	57	93	247.5	254	520

6. Spare parts


6.1 Spare parts push trolley

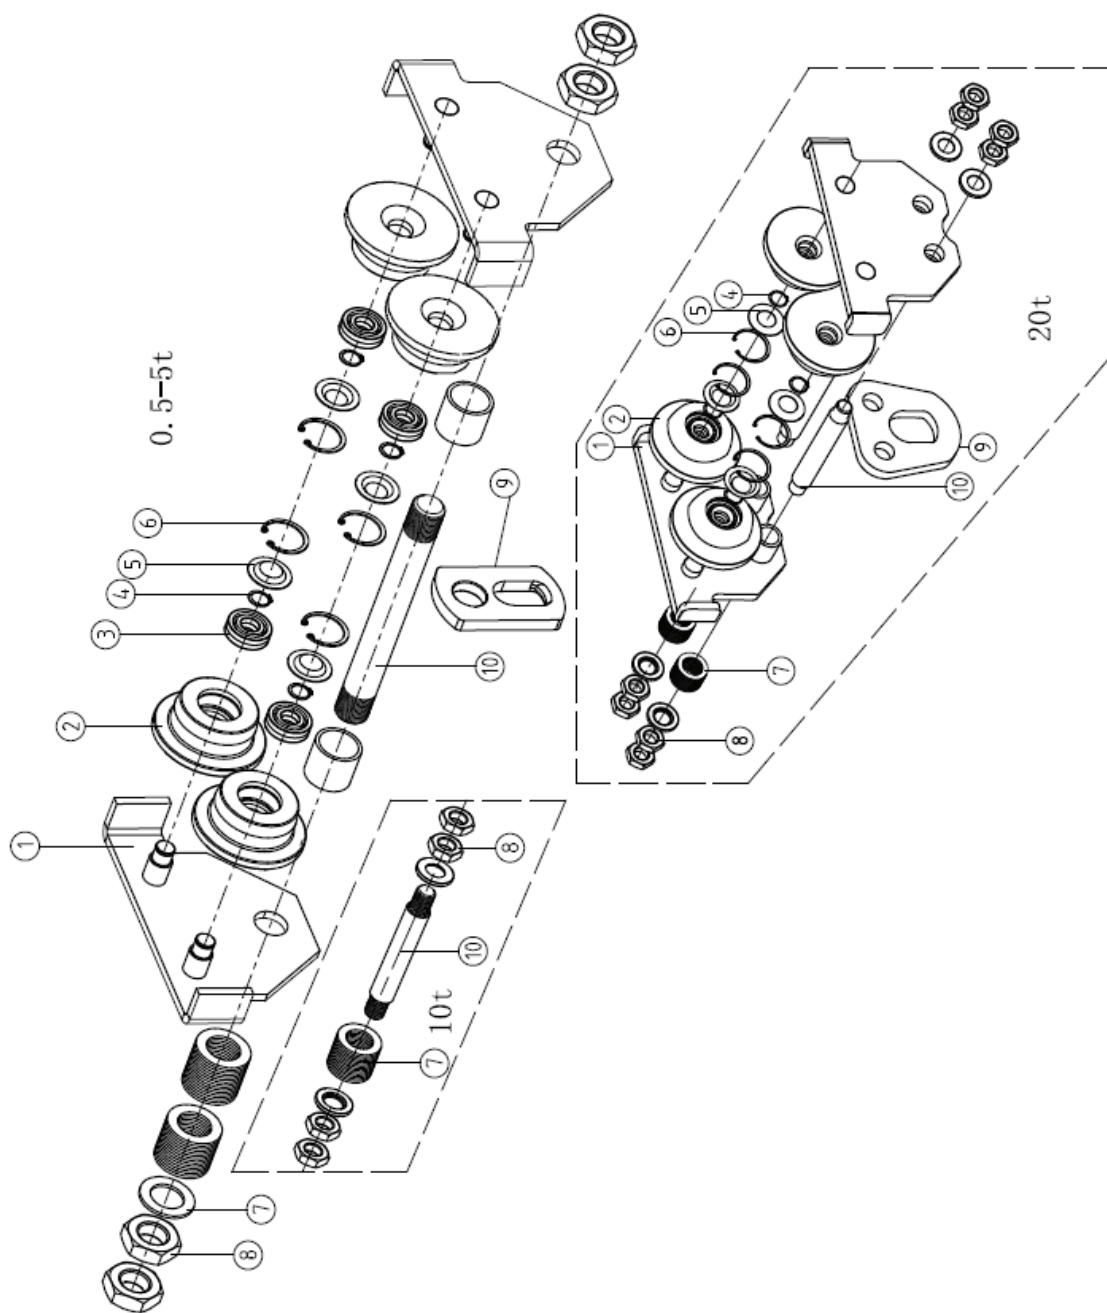


NO	Description
1.	Two gear case
2.	Wheel
3.	Bearing
4.	Axle ring
5.	Bearing ring
6.	Hole ring
7.	Space Washer
8.	Hex nut
9.	Lifting ring
10.	Equalizer pin

WARNING



Use only  **DELTA**[®] supplied replacement spare parts.


6.2 Spare parts geared trolley

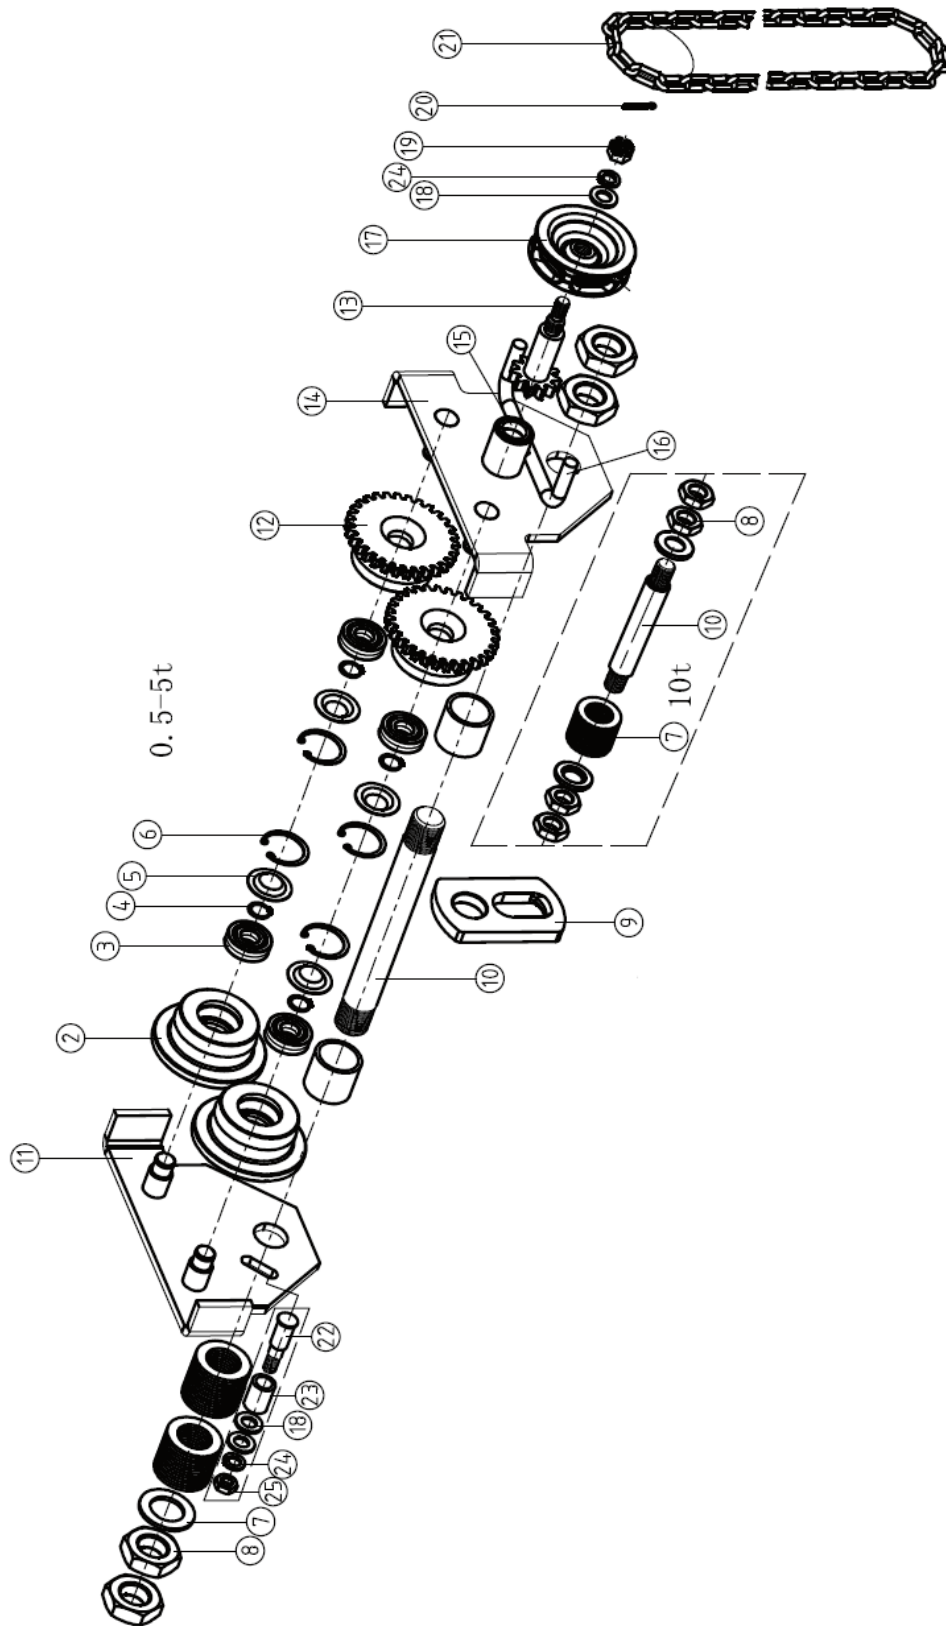








NO.	Description	NO.	Description
		16.	Catch pin
2.	Wheel	17.	Chain wheel
3.	Bearing	18.	Space washer
4.	Axle ring	19.	Hex castle nut
5.	Bearing ring	20.	Split pin
6.	Hole ring	21.	Hand chain
7.	Space washer	22.	Roll spindle
8.	Hex nut	23.	Roll sleeve
9.	Lifting ring	24.	Spring washer
10.	Equalizer pin	25.	Hex nut
11.	Left side gear case	26.	Elastic Cylindrical pin
12.	Tooth gear	27.	Gear
13.	Driven spindle	28.	Cover Assembly
14.	Right side gear case	29.	Hex bolt
15.	Copper sleeve	30.	Driven shaft components

WARNING

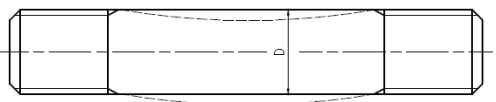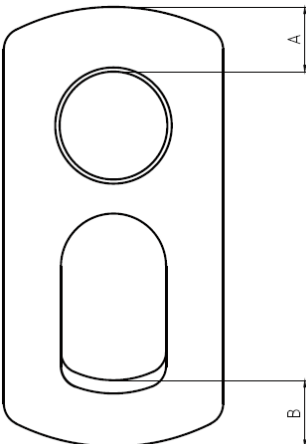


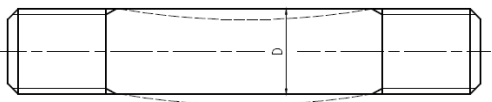
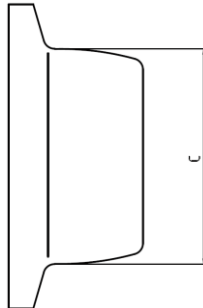


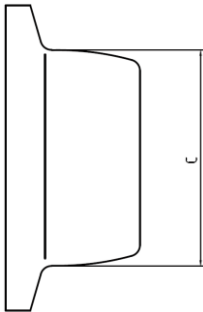


Use only  supplied replacement spare parts.






7. Maintenance					
7.1 Maintenance Push trolley					
CAUTION	The minimal maintenance requirements depends on the use of the product. A check-up and examination by a professional is required on a yearly basis.				
CAUTION	Regularly inspect  push and geared trolleys for wear, damage, distortion, cracks and any defects likely to cause a danger. Always before use				
CAUTION	If any of the above defects are found remove trolley from service and contact your supplier.				
CAUTION	In case of doubts, please put the push trolley out of use and contact your supplier.				
CAUTION	Only use  spare parts.				
CAUTION	Please see standard periodic maintenance chart below:				
Part	Method	Discard criteria	Solution		
Side Plates Part no. 1	Check visually	Check plates for any kind of damage.	Replace		
Axle Part no. 11	<div>Measure:</div>  <div>Check the axle for wear, tear, craks and deformation.</div>		Capacity (T)	D (mm)	
				Replace	
			0.5	≤ 22.8	
			1	≤ 28.5	
			2	≤ 34.5	
			3	≤ 40	
			5	≤ 45.6	
			10	≤ 57	
			20	≤ 57	
Suspension plate / Lifting ring Nr: 9	 <div>Measure</div>		Capaci ty (T)	A (mm)	B (mm)
				Replace	Replace
			0.5	≤ 10.5	≤ 13.5
			1	≤ 10.5	≤ 13.5
			2	≤ 11	≤ 18
			3	≤ 19	≤ 23
			5	≤ 24.6	≤ 30
			10	≤ 35.6	≤ 40
			20	≤ 35.6	≤ 63

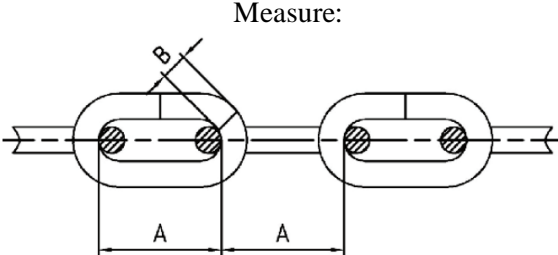Wheel Part no.: 2	 Measure		Capacity (T)	C (mm)
				Replace
			0.5	≤ 49.5
			1	≤ 63
			2	≤ 76.5
			3	≤ 94.5
			5	≤ 105.3
Wheel Part no.: 2	Check visually	Check the wheels for for any kind damage or wear.	Replace	
Hexagon nuts Part no.: 9	Check visually	Check all hexagon slotted nuts are still firmly tightened	Replace	
CAUTION	The user / owner is responsible for correct administration / documentation of these tests, for example log.			
	Use only  DELTA [®] supplied replacement spare parts.			

7.2 Maintenance Geared trolley

CAUTION	The minimal maintenance requirements depends on the use of the product. A check-up and examination by a professional is required on a yearly basis.		
CAUTION	Regularly inspect  push and geared trolleys for wear, damage, distortion, cracks and any defects likely to cause a danger. Always before use		
CAUTION	If any of the above defects are found remove trolley from service and contact your supplier.		
CAUTION	In case of doubts, please put the push trolley out of use and contact your supplier.		
CAUTION	Only use  spare parts.		
CAUTION	Only use  hand chain		
CAUTION	Please see standard periodic maintenance chart below:		
Part	Method	Discard criteria	Solution
Side Plates Part no. 1	Check visually	Check plates for any kind of damage.	Replace
Axle Part no. 11	<div>Measure:</div>  <div>Check the axle for wear, tear, cracks and deformation.</div>	Capacity (T)	D (mm)
			Replace
		0.5	≤ 17
		1	≤ 20.5
		2	≤ 26.5
		3	≤ 32.5
		5	≤ 38
Wheel Part no.: 2	 <div>Measure</div>	Capacity (T)	C (mm)
			Replace
		0.5	≤ 49.5
		1	≤ 63
		2	≤ 76.5
		3	≤ 94.5
		5	≤ 105.3
Wheel Part no.: 2	Check visually	Check the wheels for for any kind damage or wear.	Replace
Hexagon nuts Part no.: 9	Check visually	Check all hexagon slotted nuts are still firmly tightened	Replace

Hand chain	<p>Measure:</p> 			Replace	
	Size	A (mm)	B (mm)		
		Discard	Discard		
	5 X 23.7	≤ 25	≤ 4.5		
CAUTION	The user / owner is responsible for correct administration / documentation of these tests, for example log.				
	Use only  DELTA [®] supplied replacement spare parts.				

8. Trouble shooting		
TROUBLE	CAUSE AND EXPLANATION	SOLUTION
 DELTA SPARKLESS® push and geared trolleys wheels do no move.	<ol style="list-style-type: none"> 1. Lack of grease (bearing). 2. Bearing is damaged. 	<ol style="list-style-type: none"> 1. Open the bearing cover and grease the components. 2. Change bearing
 DELTA SPARKLESS® push and geared trolleys trolley runs tilt.	<ol style="list-style-type: none"> 1. Wheel are out of position. 2. Beam is uneven. 	<ol style="list-style-type: none"> 1. Adjust the wheels and make sure that the wheel flanges are correctly positioned on to the beam by covering enough beam edge surface. 2. Check the beam surface.
Wheel flange and beam edge clearance is too large or too small.	<ol style="list-style-type: none"> 1. the nut of the equalizer pin is loose. 2.  DELTA SPARKLESS® push and geared trolleys spacers washers are incorrectly distributed (too much or too less) between the two side plates 	<ol style="list-style-type: none"> 1. Tighten the nut. 2. Increase or decrease spacer washer.
Hand chain is fixed or pulling force is heavier than usual.	<ol style="list-style-type: none"> 1. Driven shaft is rusted 2. Hand wheel or catch pin is jammed 3. Bearing is damaged 4. Overload 5. Beam is uneven 	<ol style="list-style-type: none"> 1. Remove rust 2. Try to get catch pin to right position and loosen hand wheel. 3. Replace bearing 4. Check if the  DELTA SPARKLESS® trolley is overloaded 5. Check the beam surface.
Hand chain climbed	<ol style="list-style-type: none"> 1. Serious hand wheel wear 2. Hand chain is deformed 	<ol style="list-style-type: none"> 1. Replace the hand wheel 2. Replace the hand chain.
The  DELTA SPARKLESS® push and geared trolleys deviates when used.	<ol style="list-style-type: none"> 1. Side plate deformation. 2. Bearing damaged. 3. Beam is uneven 	<ol style="list-style-type: none"> 1. Replace the side plate 2. Replace the bearing 3. Check the beam surface.

9. Derived certificate of test & Declaration of conformity



AFLEID TEST CERTIFICAAT & CONFORMITEITSVERKLARING

Hiermede verklaren wij dat het hieronder vermelde product zorgvuldig geïnspecteerd en beproefd is en dat de volgende beproevings- en inspectiegegevens overeenstemmen met de specificaties van ons technisch dossier.

Omschrijving :

Model :

Serie nummer :

Max. veilige belasting :

MinimumBreeklast:

Met dit certificaat wordt verklaard dat het bovengenoemde product in overeenstemming is met de veiligheidsfactoren overige veiligheidsreken van de EC Machinerichtlijn 2006/42/EC en overeenkomstig getest door een verantwoordelijke en bevoegd persoon.

Handtekening :

Signed by:

M.F. Stam

Functie :

Position :

Director

Datum:

Date:

Factuur nummer:

Invoice no.

DERIVED CERTIFICATE OF TEST & DECLARATION OF CONFORMITY

This is to certify that the undermentioned product has been thoroughly inspected and tested and that the following data of inspection and test is in conformity with the requirements of our technical file.

: Description .

: Type










: Serial Number

: Safe Working Load S.W.L.

: Minimum Breaking Load

This Certificate is to certify that these products comply with the requirements of the EC Machinery Directive 2006/42/EC and subsequently examined by a responsible and competent person.




 DELTA® -  DELTA BLUE® -  DELTA CLAMP® -  DELTA CONTROL® -  DELTA FOR® -  DELTA GREEN® -
 DELTA MARWEILIER® -  DELTA MARWEITAMEL® -  DELTA SILVER® -  DELTA SLING® -  DELTA SPARKLESS® -

PROF MARWEI® -  DELTALOCK® - MAVERICK® zijn geregistreerde merken en eigendom van DELTA HUISWERKTUIGEN® bv.
Adres: Titienhik 7, 1305 GRV Zaandam, Nederland.



Address:

Uiterdijk 6-7
1505 GW Zaandam
The Netherlands

Typesetting and printing errors reserved. All rights reserved. No part of this publication may be reproduced without prior written consent of  **DELTA** HOISTING EQUIPMENT.

SE&O